

EASY VIEW DIGITAL SAND TIMER INSTRUCTIONS

TO SET THE CLOCK

Starting in clock mode:


1. Press and hold CLOCK/TIMER for two seconds. *The hourglass display will flash (digital sand will appear in the upper funnel).*
2. Press 12/24 HR to switch between 12-hour and 24-hour formats. *In the 12-hour format, a P will appear to indicate PM setting.*
3. Press + or - to set the time by one-minute intervals. If you press and hold + or -, the minutes increase/decrease quickly.
4. Press CLOCK/TIMER once to confirm clock setting.



TO USE THE COUNTDOWN TIMER

Starting in clock mode:

1. Press CLOCK/TIMER. TMR will appear.
2. Press the + or - to set the desired time by one-minute intervals. If you press and hold + or -, the minutes increase/decrease quickly. *The upward pointing arrow that appears will change to a downward pointing arrow as you set the time.*
3. Press START/STOP to start the countdown. *Simulated digital sand will appear to fall from the upper funnel.*
4. To pause the countdown, press START/STOP. Restart the countdown by pressing START/STOP again.
5. When the countdown reaches 0:00, the unit will beep for one minute (the unit will automatically begin counting up). Press START/STOP to stop the beeping.
6. Press CLOCK/TIMER to return to clock mode. Press CLOCK/TIMER again to view elapsed timer time.

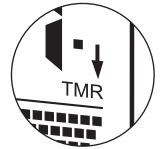


Note: To reset the countdown time to 0:00, turn the unit upside down and press COUNT-UP. If the timer is running, press START/STOP before pressing COUNT-UP.

TO USE THE STOPWATCH

Starting in clock mode:

1. Press CLOCK/TIMER.
2. Turn the unit upside down and press COUNT-UP to set the time to 0:00. *An upward pointing arrow will appear.*
3. Turn the unit upright and press START/STOP to start timing.
4. Press START/STOP to pause or stop timing. Press START/STOP again to resume.
5. If you press CLOCK/TIMER to return to clock mode during timing, the stopwatch will continue to count up. Press CLOCK/TIMER again to view elapsed stopwatch time.

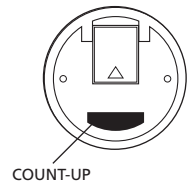

TO USE THE ALARM

Starting in clock mode:

1. Press and hold 12/24 HR for 2 seconds.
The hour and second numbers will flash.
2. Press START/STOP. *The alarm icon will appear.*
3. Press + and – to set desired alarm time. If you press and hold + or –, the numbers will increase/decrease quickly.
4. Press 12/24 HR to confirm alarm time and return to clock mode.
5. When the alarm sounds, press START/STOP.



TO CANCEL THE ALARM

Starting in clock mode:

1. Press and hold 12/24 HR for 2 seconds. *The hour and second numbers will flash.*
2. Press START/STOP. *The alarm icon will disappear.*
3. Press 12/24 HR to return to clock mode.

TURNING THE UNIT UPSIDE DOWN

LCD display switches position when unit is turned upside down.

TO RESET THE EASYVIEW DIGITAL SAND TIMER

Locate the RESET hole on the back of the unit. Insert the end of an unwound paper clip or a needle and press to reset clock, timer, stopwatch, and alarm modes.

BATTERY INSTALLATION INSTRUCTIONS

1. Slide open the battery cover located on the bottom of the unit.
2. Install one (1) AAA battery in the orientation shown beside the battery compartment.
 - Do not use rechargeable batteries.
 - Do not mix old and new batteries.
 - Do not mix different types of batteries: alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.
 - Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are to be removed from the unit before being charged.
 - Rechargeable batteries are only to be charged under adult supervision.
 - Only batteries of the same or equivalent type as recommended are to be used.
 - Batteries are to be inserted with the correct polarity.
 - Exhausted batteries are to be removed from the unit.
 - The supply terminals are not to be short-circuited.
3. Slide the battery cover closed.



CLEANING

Clean EasyView Digital Sand Timer with a damp or dry cloth — do not immerse or spray any liquid or water on it.

© 2007 Educational Insights, Inc., Rancho Dominguez, CA (USA). All rights reserved. Learning Resources, Ltd., King's Lynn, Norfolk (UK). Made in China. Please retain this information.

CUSTOMER SERVICE: (800) 995-4436 Monday–Friday

WEBSITE: www.EducationalInsights.com



**Educational
Insights®**

